 


41-4274 Dynamo

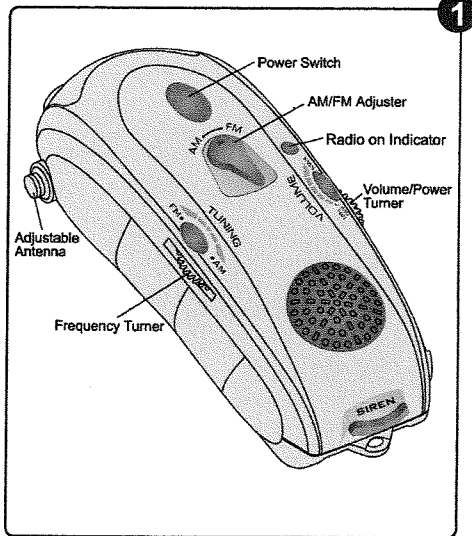


A. Instruction for Flashlight Operation

1. Press once to light 3 LEDs.
2. Press twice to light 3 LEDs blinking.
3. Press again to switch off the power.
4. Repeat the above steps for the function you wish to operate.


B. Operation for radio

1. Switch on the Radio power by turning the Volume/Power Turner to the indicated direction of "MAX", (a "Click" sound will be heard and the Radio Power Indicator would be on), turn the Turner to the right or left for the Volume you need. (0-OFF, 6-Max. Volume)
2. Switch the AM/FM Adjuster to FM and turn the Frequency Turner for the Radio Station ranged from 88 to 108MHz.
3. Switch the AM/FM Adjuster to AM and turn the Frequency Turner for the Radio Station ranged from 530 to 1700KHz.
4. Pull out the Antenna and adjust it to the best receiving angle.
5. To switch off the power, turn the Volume/Power Turner to the direction of "MIN", (a "Click" sound will be heard and the Radio Power Indicator would be off), power's off.
6. Plug the $\varnothing 2.5\text{mm}$ Earphone into the Jack for Radio listening.
(Attention: For best sound effect, the plug shown on the Figure 2 is recommended when purchasing for earphone.)

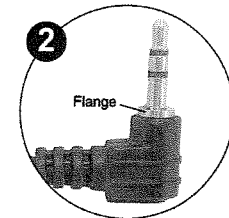


C. Operation for Siren

1. Pull out the Siren Switch for the Siren function as the Figure 3 shown and the Radio Power Indicator would be on, Siren 85dp.
2. Push in the Siren Switch to stop the function.
(Warning: Lightly pull out the Siren Switch, Torque $\leq 1\text{Kgf}$; Max.Length $\leq 3.5\text{mm}$, and stop pulling while reached to the Max.Length in order to avoid damage caused.)

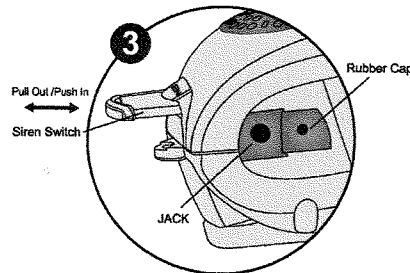

D. Operation for Winding the Crank

1. Switch off the power.
2. Lift up the Crank as the FIGURE 4 shown.
3. Wind the Crank clockwise or counterclockwise for 1~2Min.
4. Place the Crank back to use/store Flashlight.

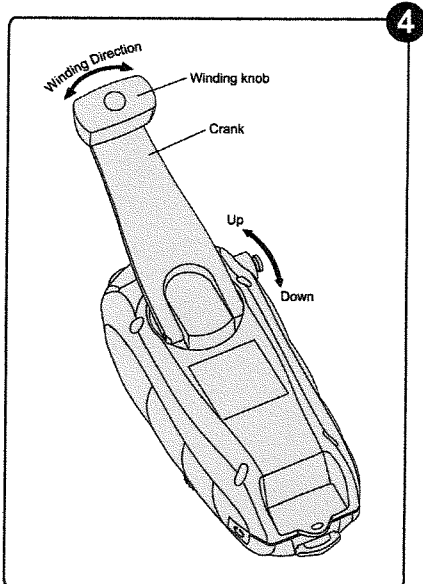

E. Notices



1. Always keep power switch at "OFF" position when not in use.
2. Do not light directly toward people's eyes.
3. Siren would be taken as the first priority once being activated while Radio's on.
4. Pull out the Earphone Plug before using Siren function.
5. Charge the flashlight when light turn dim.
6. Make sure the power switch remained at "OFF" position while charging.
7. Keep winding steadily by the same direction for every charge.
8. Make sure the product would get recharged for 1Min. after every operation.
9. If the product would be stored over a long period of time, make sure the torch would get recharged at least for 2Min. once in every 3 months.

F. Specifications

1. Built-in rechargeable Lithium battery/LIR2450, 3.6V, 110mAh.
2. Under normal wear and tear, Lithium battery is allowed to recharge ≥ 500 times.
3. 2 Min.winding for 8~12 Min. Radio power operation.
4. 160rpm/per Min. for Flashlight power operation:
 - a. 3pcs LED's power duration are up to 17 Min.
 - b. 3pcs LED's flasher are up to 25 Min.