

Instructions for T-6 Bulb Replacement

Note: Two styles of bulb assemblies have been used with the T-6 flashlight. One style has a one-piece bulb and reflector assembly; the other style has a separate bulb and reflector. Please refer to the instructions for your style light. The one-piece design has a factory-adjusted beam and is the current design.

One-Piece Bulb and Reflector

To change the bulb and reflector assembly, unscrew the smooth front section (with clear lens) from around the reflector on the head assembly. TacStar T-6 is printed on this part. Lift out the bulb and reflector assembly. Remove the large diameter spring from the outside of the old bulb assembly. Push this spring onto the outside of the new bulb assembly. Place the new bulb assembly into the light. Screw the front section with lens back into place and tighten securely.

Separate Bulb and Reflector

To install the current one-piece bulb and reflector design, unscrew the head assembly from the body of the flashlight. Unscrew and remove the bulb assembly from the flashlight body. Unscrew the smooth front section (with clear lens) from around the reflector on the head assembly. TacStar T-6 is printed on this part. Lift out the old reflector. Replace this with the new bulb and reflector assembly. Screw the front section with lens back into place and tighten securely. Reinstall the head assembly onto the flashlight body by threading it on until it stops.